

INSTALLATION MANUAL

TQ KRT2 – angled Adapter BLE Bluetooth

EasyVFR · EXPERIMENTAL

Bluetooth Low Energy adapter (BLE) that handles the data transfer between the navigation software and a TQ KRT2 VHF transceiver (aviation radio) (BLE ↔ RS-232). The adapter simply connects to the radio – **no further electrical work required**.



SPECIFICATIONS

RADIO	TQ KRT2
COMPATIBILITY	KRT2-S · KRT2-F · KRT2-P
OPERATING SYSTEM	Android · iOS
INTERFACE	BLE ↔ RS-232
POWER SUPPLY	via the radio · 12/24 V
INTEGRATED FUSE	yes · not self-resetting
WEIGHT	50 g
DIMENSIONS	46,44 × 23,94 × 16,5 mm

IMPORTANT

This is a prototype for experimental use only!

1 Radio Configuration

IMPORTANT NOTICE

Baud rate: 9600, not 115200

The TQ documentation states a baud rate of 115200 – correct for operation with the SD-Link is 9600 baud, 8N1.

No additional configuration is required on the radio unit.

2 Connector Pin Assignment

This is an excerpt from the TQ installation manual:

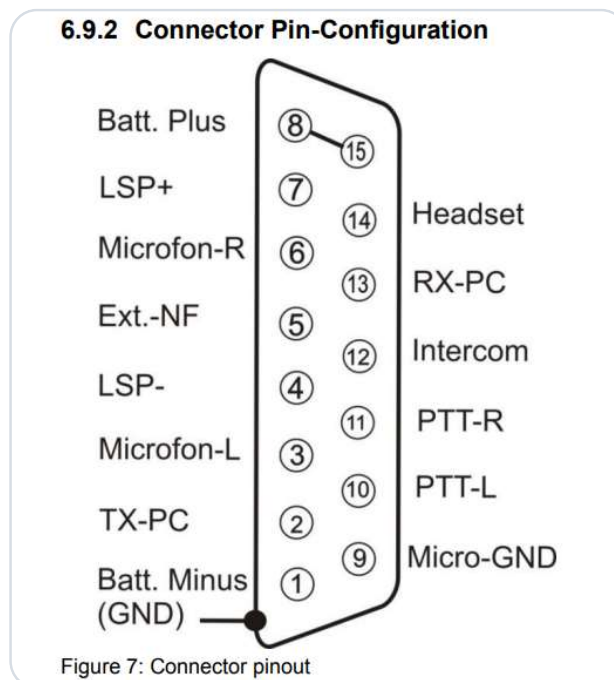



Figure 1 · KRT2 Connector Pinout

3 Product Variants

The mechanical orientation of the connector differs between the KRT2-S and KRT2-F. This changes the direction in which the adapter is angled. Therefore, please pay attention to the respective radio unit when selecting the product variant (LEFT/RIGHT).



For this reason, there are the product variants **SD-KRT2-A-LEFT** and **SD-KRT2-A-RIGHT**.

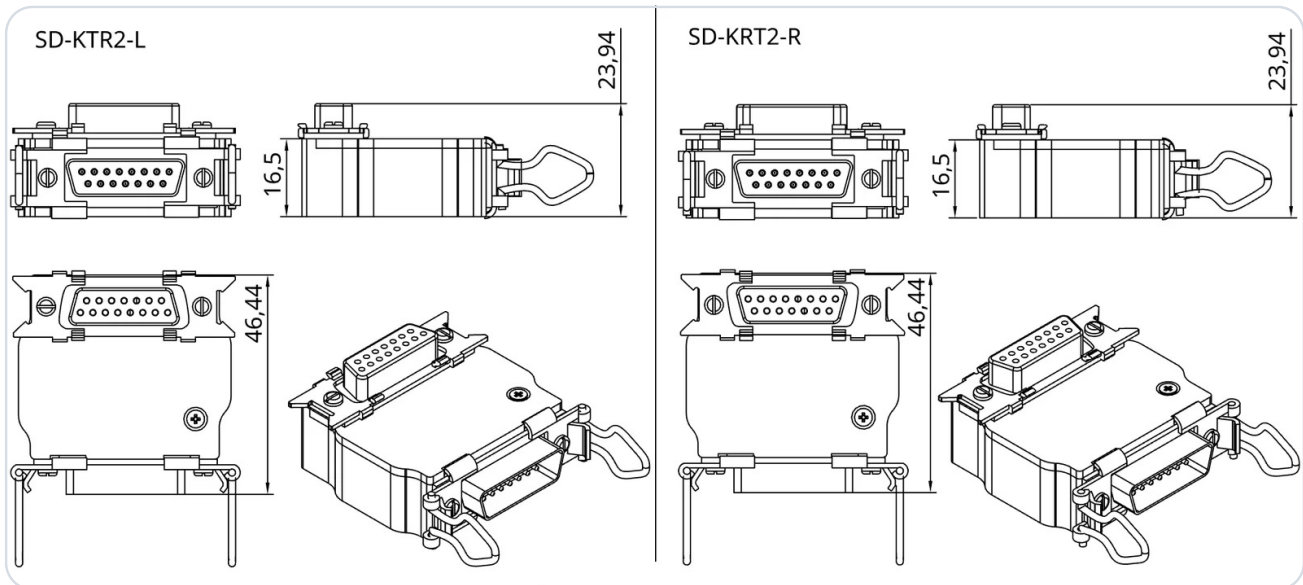

3.1 Orientation of LEFT/RIGHT per Radio Unit

Device	Desired Orientation	Required Adapter
KRT2-F	Points upward	SD-KRT2-A-LEFT
KRT2-F	Points downward	SD-KRT2-A-RIGHT
KRT2-S	Points downward	SD-KRT2-A-LEFT
KRT2-S	Points upward	SD-KRT2-A-RIGHT

4 Configuration in EasyVFR

IMPORTANT

Do not pair the SD-Link in the Bluetooth settings

The SD-Link adapter is a Bluetooth Low Energy (BLE) device. BLE devices are not paired via the Bluetooth settings of your tablet or phone like regular Bluetooth devices such as headsets or speakers.

Therefore, please do not open the Bluetooth settings of iOS, Android or Windows to search for or pair the SD-Link there.

The connection to the SD-Link is set up exclusively within the navigation app itself, e.g. in SkyDemon, Sky-Map, VFRnav, EasyVFR or another supported app. Pairing at operating-system level is not required and can even prevent the connection.

Regular Bluetooth devices such as headsets, intercoms or speakers can still be used in parallel. They are paired via the operating system as usual. The SD-Link, however, is addressed directly by the navigation app.

If the SD-Link has already been paired in the Bluetooth settings: Please remove the SD-Link completely from the Bluetooth device list of your tablet or phone. Do not pair it again via the operating system afterwards; instead, set it up again exclusively within the navigation app.

REMEMBER

**Do not pair the SD-Link in the operating system.
Always set up the SD-Link directly in the navigation app.**

4.1 Enable Bluetooth and select radio

- Switch on aircraft power, turn on the radio.
- Enable Bluetooth on your phone / tablet.
- Start EasyVFR4.

GPS, RADIO and AutoPilot Settings

Port Not Set

Bluetooth (BLE)

Enable Bluetooth BLE ☒

Radio

Trig, Garmin (GTR225 format) ☒8.33 Spacing ☒F.u.n.k.e ATR833 ☐TQ KRT2 ☐Send SL-30 format (PMRRV) ☐Send SL-40 format (PMRRC) ☐BLE Device Manager ×

List of discovered Bluetooth BLE Devices and their assigned usage in EasyVFR

 BT578_BLE_03EA Discovered	Type: Undefine
 BT578_BLE_03EA Connected	Type: Radio

4.1.1 Enable Bluetooth BLE in EasyVFR

- ① Open menu
- ② **System** → **GPS, Radio and AutoPilot Settings**
- ③ Scroll down and activate option **Enable Bluetooth BLE**

4.1.2 Select radio protocol

- ① Continue scrolling down to the Radio section
- ② Select matching radio/protocol
- ③ If your device is not listed: test protocols, recommended from top to bottom
 - **GTR225** is the most comprehensive (incl. 8.33 kHz),
 - **SL40/SL30** are older legacy protocols.


4.1.3 Open BLE device list and assign adapter

- ① EasyVFR now continuously scans for BLE devices
- ② Menu → **Bluetooth BLE devices**
- ③ Select the adapter from the list (e.g. **SD-KRT2**)
- ④ Tap the Type until **Radio** is set (cycle: AutoPilot / GPS/Traffic / Radio / undefined)
- ⑤ EasyVFR connects; indicated by "Connected" (incl. Bluetooth icon).


4.1.4 Send frequencies (Remote Tuning)

- 1 Tap frequency in:

Airfield Info	
TWR	135.180 Lelystad Tower 123.830
ATIS	120.730 Lelystad Information H24
CLD	123.680 Lelystad Delivery 123.830 Start-up and clearance delivery
APP	134.530 Lelystad Arrival 120.830

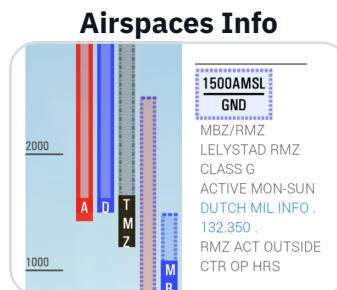

Radio and Position	
N52 27 31.0	E005 31 27.7
0.5NM NE of EHLE-Lelystad	
3.6NM S of Lelystad (NL)	
Departure	
EHLE Lelystad, -12ft	
Density Altitude -396ft	
ATIS	120.730 Lelystad Information
CLD	123.680 Lelystad Delivery
TWR	135.180 Lelystad Tower
APP	134.530 Lelystad Arrival

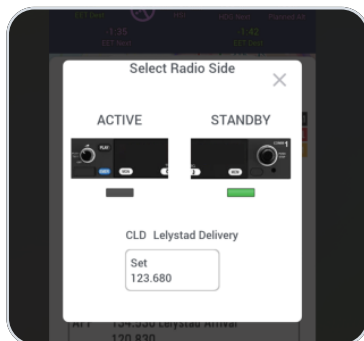

- 2 Then select **Active** or **Standby** (depending on the radio, only Standby may be possible) → press **Set**.

4.1.5 Optional control aids (Radio Card)

Radio and Position	
N52 27 31.0	E005 31 27.7
0.5NM NE of EHLE-Lelystad	
3.6NM S of Lelystad (NL)	
List of previously selected frequencies	
RDO	121.005 Teuge Radio
	132.350 DUTCH MIL INFO
APP	119.055 Schiphol Approach
CLD	123.680 Lelystad Delivery
TWR	135.180 Lelystad Tower
ATIS	120.730 Lelystad Information
MISC	134.480 Gilze Monitor
APP	134.530 Lelystad Arrival

- 1 Keypad icon: manual frequency entry
- 2 Clock icon: recently set frequencies (History)

5 Contact

For problems, questions, suggestions or even positive feedback, please contact:

LayCom Vision GmbH – SD-Link

Michael Hoffmann

Chausseestr. 46
D-15518 Rauen, Germany

E-Mail info@sdlink.de

Phone **+49 3361 710253**

Web www.sdlink.de

